


EP10 INDUSTRIAL MANUAL SET-UP DIAGRAM

(continuous flow) *MANUAL VAKUUM BAG OR FRAME PRESS VENEERING*

4/7/98 - EP10 Manual VB&FP Veneering.cdr

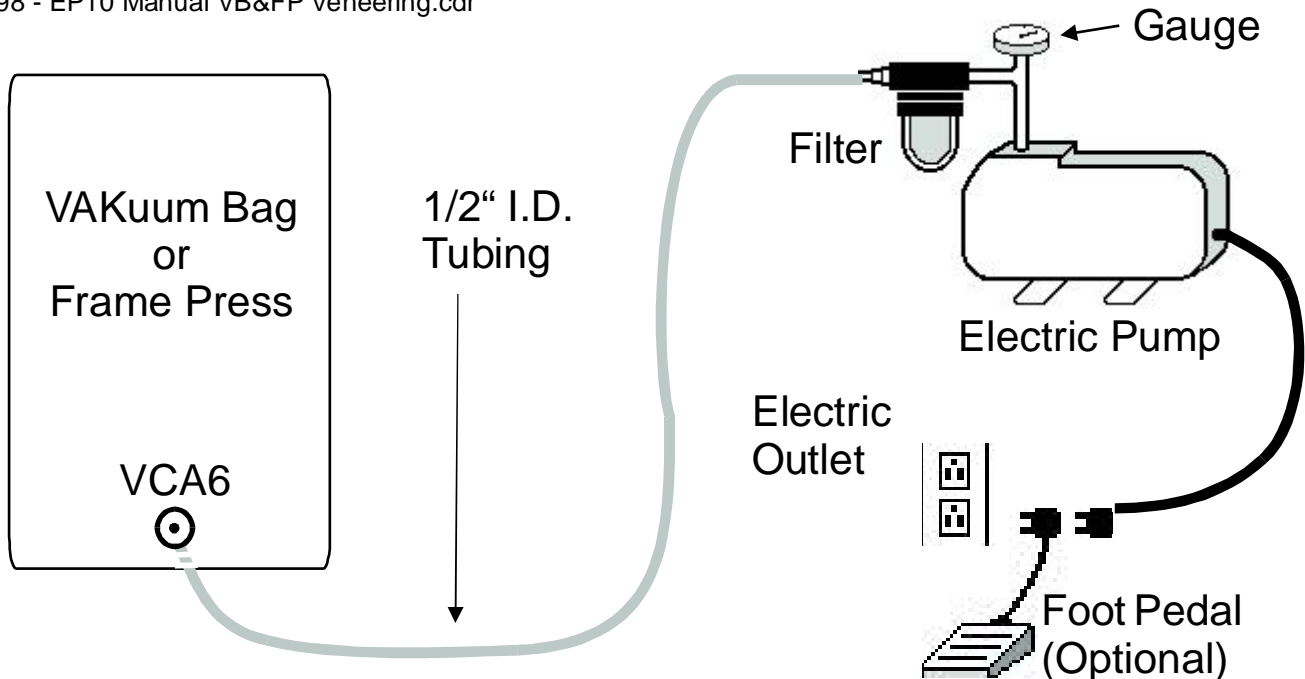

- 1.) Screw the filter/gauge assembly onto the **Electric Pump**.
CAUTION: Do not use the filter as leverage to tighten the assembly, as it may break. Use a wrench on the brass fittings to tighten the assembly.
- 2.) Attach the long piece of hose to the barb on the filter/gauge assembly.
- 3.) Attach the long clear piece of tubing from the filter/gauge assembly to the VCA6 (**VAKuum Connector Assembly**) on the **VAKuum Bag** or **VAKuum Frame Press**. Refer to Instructions for Assembling the VAKuum Bag for details.
- 4.) If you are using an optional **Foot Pedal** connect the pump to the pedal and the pedal to the electric outlet. The pedal is an On/Off switch for the pump.

CALL 800 547-5484 with any Questions