


AO

INSTRUCTIONS FOR THE DELUXE Industrial and Super-Industrial Manifold

5/26/99 Deluxe Manifold.cdr

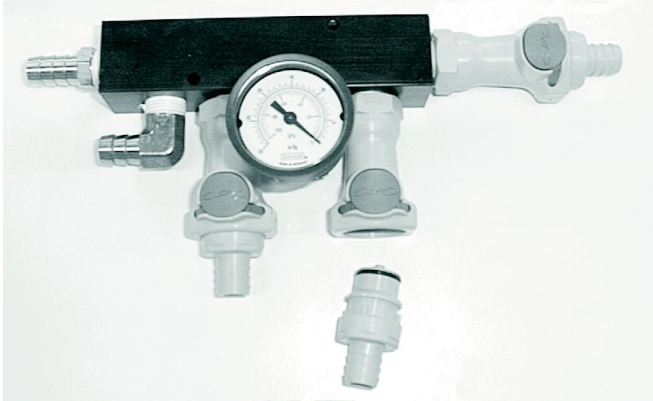

Attach each vacuum line from the automatic controller to each of the brass barbs in the manifold.

From the vacuum hose supplied, cut the desired length and attach one end to the hose barb on the male quick disconnect. The other end of the hose attaches to the VCA6 in your bag or frame press.

When removing the male quick disconnect from the manifold, you will not lose vacuum in the other bags as the female quick disconnect has an internal shut off that prevents vacuum loss.

If the controller is not accessible, the VAK Gauge will tell you what vacuum pressure you have in the bags.

CALL 800 547-5484 with any Questions

Quality VAKuum Products, Inc.

43 Bradford St. - Concord, MA 01742
Tel: 978-369-2949 - Fax: 978-369-2928